

Explosion View and parts list

| Ref. | Description | pcs | Ref. | Description | pcs |
|------|-----------------------|-----|------|--------------------|-----|
| 1 | Penta-blade rod | | 41 | Wheel 16*8.0-7 | |
| 2 | Triangle blade | | 42 | Flange | |
| 3 | Φ8 washer | | 43 | Seal Φ25*47*7 | |
| 4 | M10*25 thinhead screw | | 44 | Bearing6205 | |
| 5 | Bearing 1507 | | 45 | Wheel pipe axle | |
| 6 | Pulley Φ200 | | 46 | Battery box | |
| 7 | B-belt 940 | | 47 | Baseframe plate | |
| 8 | Engine | | 48 | Mouth frame | |
| 9 | Adjust plate 4-0 | | 49 | Feed rubber | |
| 10 | Adjust plat 8-0 | | 50 | Foot angle plate | |
| 11 | Tow bar | | 51 | Feed hopper | |
| 12 | Belt cover | | 52 | Switch valve | |
| 13 | Clutch Φ125 | | 53 | Speed valve | |
| 14 | Washer 2-0 | | 54 | Spring | |
| 15 | M8*25 screw | | 55 | Cover | |
| 16 | Bearing 6306-2RS | | 56 | Short blade spacer | |
| 17 | Lock nut M35*1-5 | | 57 | Interval rod | |
| 18 | Blade push-plate | | 58 | Main axle | |
| 19 | Key way 8*7*60 | | 59 | Plate blade | |
| 20 | Long blade spacer | | 60 | Bearing FL206 | |
| 21 | Bearing base | | 61 | Pulley A Φ90 | |
| 22 | Fan plate | | 62 | Belt A Φ500 | |
| 23 | Blade plate | | 63 | Pin 8*7*30 | |
| 24 | Anvil | | 64 | Rubber seal | |
| 25 | Bottom frame | | 65 | Emergency stop | |
| 26 | Switch | | 66 | Hopper block plate | |
| 27 | Battery | | 67 | Push bar | |
| 28 | Cover fixing plate | | 68 | Pump joint | |
| 29 | Rear frame | | 69 | Pump | |
| 30 | Rubber pad | | 70 | Pump fixing plate | |
| 31 | Oil bean cover | | 71 | Pump pulley | |
| 32 | Oil feed filter | | 72 | Ratchet & motor | |
| 33 | Chain | | 73 | Top cover | |
| 34 | Tank | | 74 | Top body | |
| 35 | Oil outlet filter | | 75 | Screw hook | |
| 36 | 1.5inch interface | | 76 | Bottom discharge | |
| 37 | Oil outlet interface | | 77 | Top discharge | |
| 38 | Pin Φ3.5*40 | | 78 | Fasten handle | |
| 39 | Nut M24 | | 79 | Reflect cover | |
| 40 | Φ25 washer | | | | |

